




# e-clips™

## Installation & Specifications

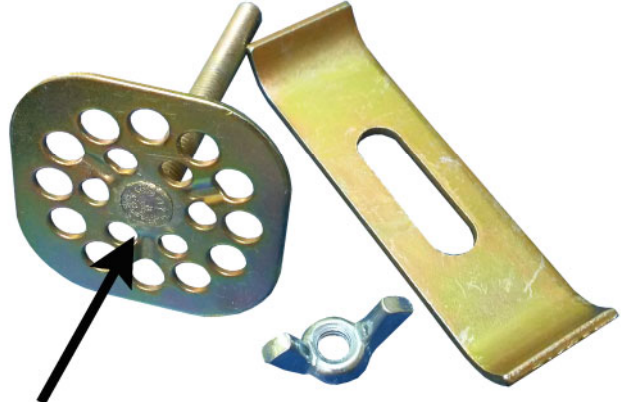


**Stud is tapped, threaded and welded into the base**

- 1. Thoroughly clean underside of countertop with alcohol where clips are to be installed prior to epoxy & clip application.**
- 2. Use a thick putty-type epoxy and apply to the bottom of the perforated base/stud.**
- 3. Press the base/stud firmly into place causing the epoxy to squeeze through the holes in the base for maximum surface contact.**
- 4. Allow the epoxy to properly set, prior to installing the sink, bracket and wingnut.**

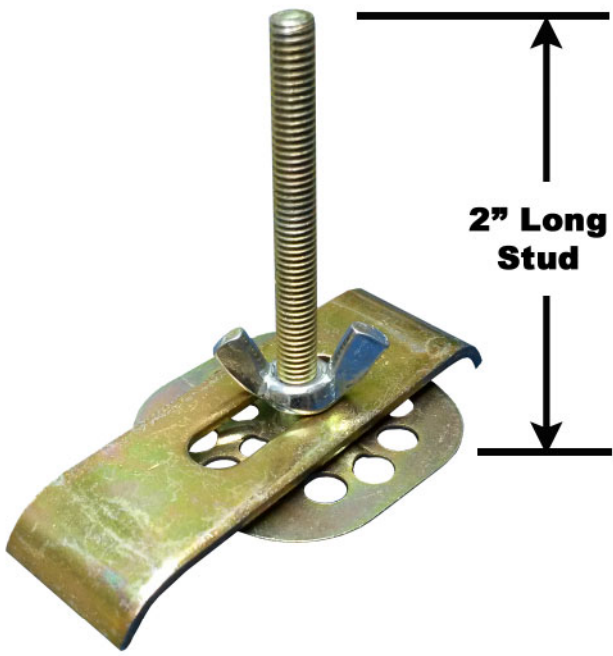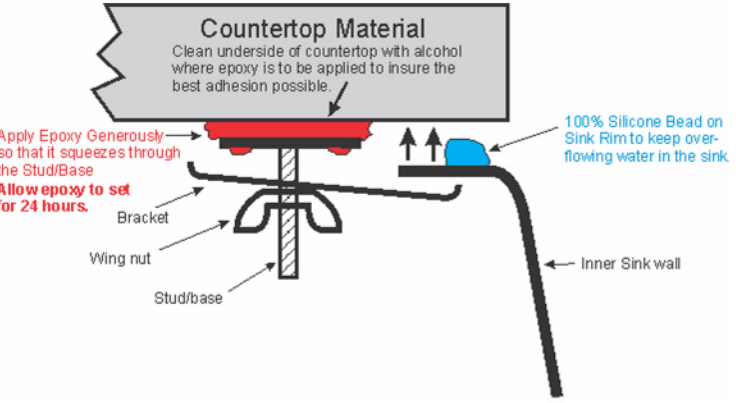

**Recommended Sink Clip Installation Locations**

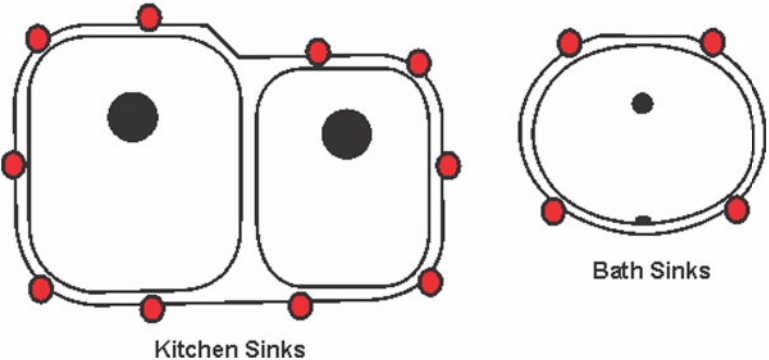

[www.visionaryinnovations.com](http://www.visionaryinnovations.com)  
[sales@visionaryinnovations.com](mailto:sales@visionaryinnovations.com)  
 (678) 653-6612